


Watchtower Moisture Decision Tree


Perform Moisture Testing by IFTI or
a certified Watchtower Trained Volunteer

RH • MVER • pH

Moderate Moisture

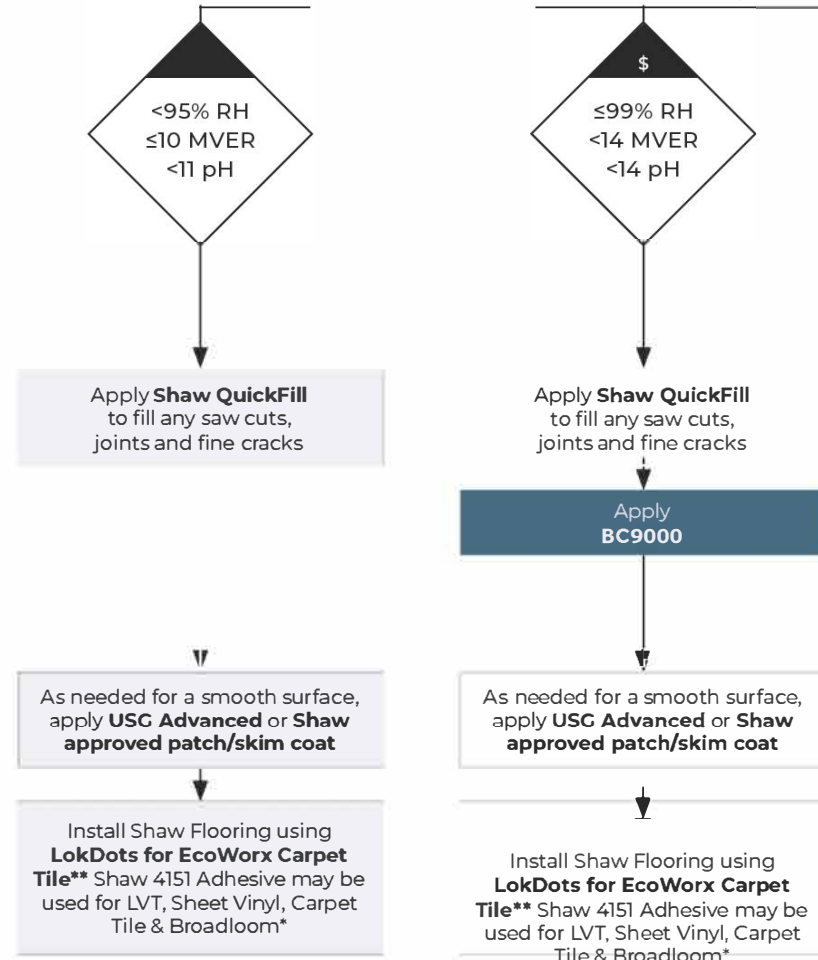

Severe Moisture

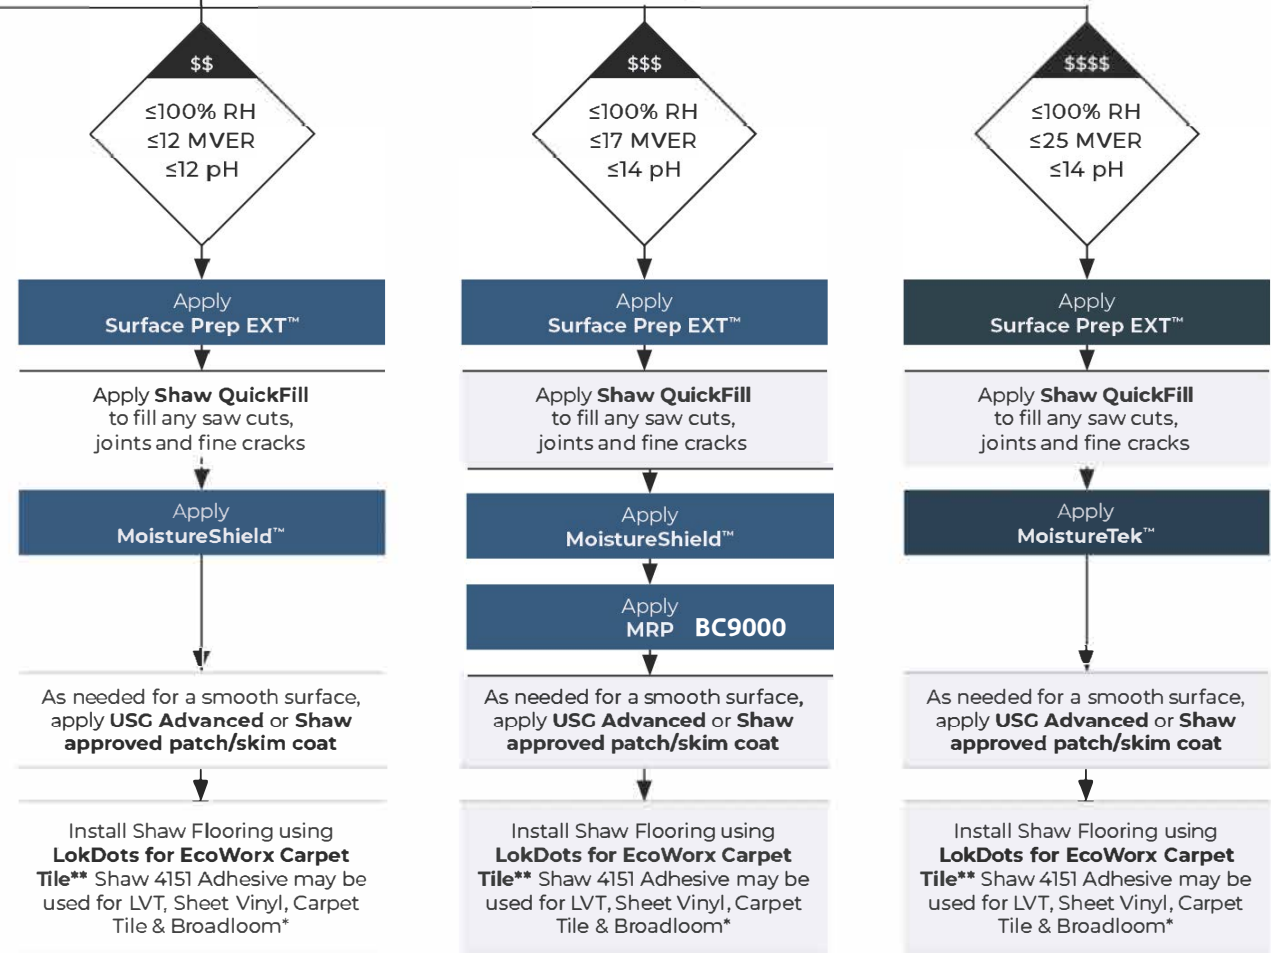

MVER – Moisture Vapor Emission Rate, measured by the Calcium Chloride Test

* Not for stretch-in patterned broadloom

** LokDots are not a moisture mitigation system. Moisture / pH testing is not required for EcoWorx when using LokDots, provided the site is absent of hydrostatic pressure. If visible moisture is present or there are known moisture issues such as hydrostatic pressure, additional steps should be taken to address the moisture issues.